

Bosch 8112

Zones - 8 to 128, hardwired, some wireless

Battery - 12 volt rechargeable Gel-Cell inside main panel

AC Transformer is 16.5 volts, screwed into outlet somewhere in house

Wireless - No

Downloadable - Call Tech Support

Panic Panic - COMMAND + 9 (This may be silent on some systems)

Special Alert - COMMAND + 7 to send a specific alarm (Optional)

Arm Away - Enter Code or COMMAND + 1 (All zone lights must be Off to arm)

Arm Home - COMMAND + 3 (Perimeter Light will turn on)

Stay Arm - COMMAND + 3 (Motions are bypassed, doors/windows will still be delayed)

Instant Arm - COMMAND + 2 (Perimeter & Instant lights will turn on, motions will not Arm)

Partial Arm - COMMAND + 8 (Arms all but open zones and bypasses motions)

Disarm - Enter Code (Perimeter, Interior and Instant lights will turn off)

Reset Alarm - Press COMMAND + 4 to stop keypad flashing and reset system

Reset Smoke - COMMAND + 4 + 7

(If this does not work power down system and set for service)

Bypass - 1. Arm system with User Code or COMMAND + 1

2. Before Exit Delay expires press COMMAND

3. Press zone to be bypassed (1, 2, 3 etc)

(Bypassed zones may turn on if closed)

Force Bypass - (Bypassing an already open zone)

1. Arm system with either User Code or COMMAND + 1, 2 or 3)

2. Keypad begins beeping, press last digit of User Code for 5 to 10 seconds

(Bypassed zones may turn on if closed)

Door Chimes - COMMAND + 6 to turn On or Off

Alarm Memory - Zone Light will flash rapidly

Phone Test - COMMAND + 4 + 1 (If Phone test is good system will sound 2 second tone)

System Test - Press COMMAND + 4 + 4, press any key to end test