

Ademco 5120 XM / First Alert 2100 C

Zones - 6 Hardwired

Battery - 12 volt rechargeable Gel-Cell inside main panel
AC Transformer is 16.5 volts, screwed into outlet somewhere in house

Wireless - No

Panic Buttons Police Panic - * and # (Original 4110's only have Police Panic)

Medical Panic - 1 and *

Fire Panic - 3 and #

Status - Press * if keypad shows NOT READY to view open zones

Arm AWAY - 4-digit code + 2 (AWAY)

Arm STAY - 4-digit code + 3 (STAY)

Instant Arm - 4 digit code + 7 (INSTANT)

Max Arming - 4-digit code + 4 (MAX), arms everything including motions instant

Quick-Arm - (If Enabled) Press # + 2 for AWAY, # + 3 for STAY

Disarm - 4 digit code + 1 (OFF)

Silence Alarm - 4 digit code + 1 (OFF) twice to turn off siren and reset display

Bypass - 4-digit code + 6 (BYPASS) + zone (01, 02 etc), BYPASS and zone should display (If this does not work try User Code + zone 1 to 6 instead)

Alarm Memory - There is no alarm memory or event buffer

Fire Drill Test - Master or User Code 2 + # + 69 (sounds siren)
End with Master or User Code 2 + OFF

Fire Walk Test - Master Code + # + 68

Sensor Test - Master Code + 5, keypad will beep every 15 seconds, activating sensors will beep keypad
Master Code + OFF ends

Reset Smoke - 4-digit code + 1 (OFF) twice to turn off siren and reset smoke (If this does NOT reset smoke detector set for service, smoke is bad)

Door Chimes - 4-digit code + 9 (CHIME) CHIME should appear on keypad display

Test Sensors 4-Digit Code + 5 (TEST)
Keypad will beep every 3 minutes
Open sensors and keypad will sound
End test with 4-digit Code + 1 (OFF) key